



Key pad connections to TrxAVR and TrxAVRB

TrxAVR 18-button board and motherboard

Ian Sumner 24th May 2009 version 1

Important !!
R1-R3 - set the max LED current
For EAW320B-8k3LW use 3x 22R = 7.3R
- this gives 190mA assuming LED volts = 3.3